


# Power Coupling Filter

for use with non-Vanguard receivers

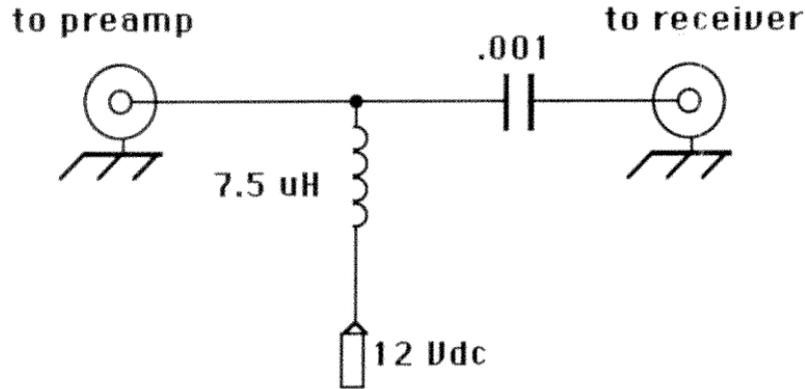

Note: The .001 capacitor is not needed if there already is a coupling capacitor on the receiver input. The purpose of this capacitor is to prevent the 12 Volts from being shorted to ground. The purpose of the choke is to prevent RF from being shorted by the 12 Volts DC.